

Print Head Installation Guide (SOBAR™ SPX-390)

CAUTION:

The printhead is sensitive to static electricity, which can damage the printhead or reduce its life. Ground yourself by touching some metal, such as printer's metal base, before touching the printhead. Clean the printhead to remove any salt or oil left from handling prior to operation.

- 1- Turn power switch off, unplug the power cord.
- 2- Open the printer cover.
- 3- Lift the printhead lever counterclockwise to raise the printhead.
- 4- Remove the ribbon and tickets from the printer.
- 5- Release the printhead mounting bracket/printhead from the spring-pressure assembly by removing two screws.
- 6- Unplug cable from printhead.
- 7- Release the printhead from printhead mounting bracket by unscrewing two helps level screws.
- 8- Place a new printhead into the printhead-mounting bracket.
- 9- Align the two-printhead mounting holes matching with two mounting holes on the printhead-mounting bracket.
- 10- Tighten the two screws.
- 11- Plug the cable to the printhead.
- 12- Attach the printhead mounting bracket printhead to the spring –pressure assembly by tightening two screws.
- 13- Reload the ribbon and tickets.
- 14- Push the printhead level clockwise until the printhead is locked.
- 15- Plug the power cord, turn power switch on.

NOTE: Normally, mechanical adjustment is not necessary when replacing the printhead. Mounting screws on the mount assembly automatically locate the printhead. However, if the new print head performs poorly, some adjustment may be necessary.