


## SETTING THE TEC B-SX4 FOR POT STAKE PRINTING

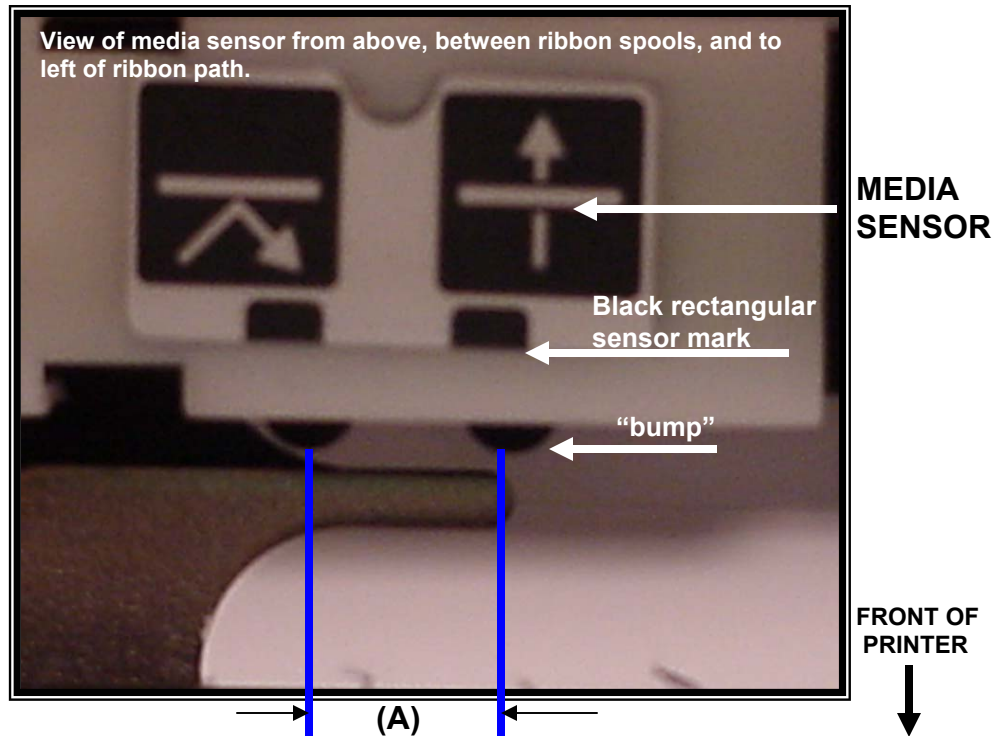

- (A) Center the sensor space over the gap as shown. Use the "bumps" OR the black rectangular marks on the forward side of the sensor as a guide.
- Note : Tag stock must be loaded and centered correctly. The notch is positioned so that the curvature is NOT seen by the sensor, but so that the longest, and straightest part of the notch passes across the sensor.



### Label Format Settings:

The successful dimensions for this print were as follows:

Height: 0.938

Width: 4.000

Vertical Gap: 0.120

This test was run using the SX4 and Labelview 7.0.

On the printer: The FORWARD FEED setting was set for -1.0mm

To Change the FORWARD FEED setting:

1. Turn printer off.
2. Hold FEED and PAUSE at the same time and turn the printer on simultaneously.
3. At (1) DIAG, press FEED two times to the (3) ADJUST SET heading.
4. Press PAUSE once to "FEED ADJ. +0.0"
5. Press FEED and advance numbers to (minus) - 1.0 mm.
6. Press PAUSE to save the setting and press again to go to BACK ADJ. -
7. Press FEED and advance the numbers to (minus) -0.5mm
8. Press PAUSE to save your settings
9. Turn the printer off. Then turn it back on and begin to print.